


LONDON CLOCK SINCE 1922

NX280 LCD Radio Controlled Alarm Clock

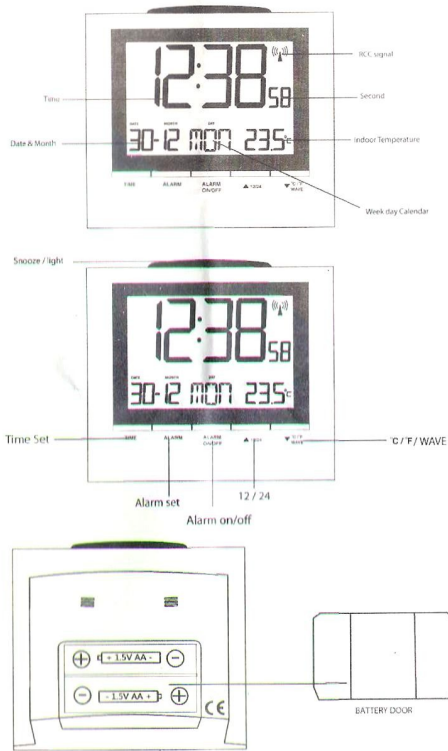

P.1

FEATURES:

- Radio controlled clock
- Manual time setting
- 12- or 24-hour time display
- Calendar display
- Time zone (+/- 12 hours)
- Indoor temperature in °C/°F
- Alarm snooze function
- 5 languages selectable display in Day-of-week: German, English, French Italian and Spanish
- Jumbo LCD
- Back-light

INSTALLATION AND SET-UP

- Place clock face down on a flat surface and carefully slide the battery cover off at the back of the unit
- Insert 2 x AA batteries into the battery compartment taking care to observe the correct + / - polarity. If batteries are already installed remove the isolation tabs.
- Replace the battery cover
- The clock will automatically begin searching for the Radio controlled signal. Please do not touch any buttons when installing batteries or whilst the clock is searching for the signal.
- Please allow up to 10 minutes for the signal to be received. However, if the clock still hasn't set it is recommended that you leave it overnight.

MANUAL TIME SETTING:

- In some cases, after inserting the batteries, the clock may not be able to receive the MSF signal. In this situation, the time should be set manually.
- Press and hold the TIME key for 3 seconds and the "hour" digits will start flashing, press ▲ or ▼ key to adjust the hour.
- Press the TIME key again and the "minute" digits will start flashing, press the ▲ or ▼ key to adjust the minute.
- Press the TIME key again and the "second" digits will start flashing, press the ▲ or ▼ key to clear the "second" to 0.
- Press the TIME key again and the "year" digits will start flashing, press ▲ or ▼ key to adjust the year.
- Press the TIME key again and the "dash" between "date" and "month" will start flashing, press ▲ or ▼ key to shift the position of "date" and "month".
- Press the TIME key again and the "month" digits will start flashing, press the ▲ or ▼ key to adjust the month.
- Press the TIME key again and the "date" digits will start flashing, press the ▲ or ▼ key to adjust the date.
- Press the TIME key again and then press the ▲ or ▼ key to set the time zone, e.g. when the country time is faster than MSF time for 1 hour, the zone should be set to +1.
- Press the TIME key again and then press the ▲ or ▼ key to choose the language for the Day of week.
- Press the TIME key again to return to normal display.

P.2

ALARM SETTING:

- Press the alarm button.
- Press and hold the ALARM key for 3 seconds and the "minute" digits of alarm time will start flashing, press ▲ or ▼ key to adjust the minute.
- Press the ALARM key again and the "hour" digits of alarm time will start flashing, press ▲ or ▼ key to adjust the hour.
- Press the ALARM key again to return to alarm time display.
- Press the ALARM ON/OFF key once to activate alarm on function and twice to activate snooze function (the symbols will be displayed on the screen above the alarm time). Press the ALARM ON/OFF key once more, the alarm on function will be inactivated.
- Press TIME key to return to normal display mode.

SNOOZE/LIGHT KEY

- When the snooze alarm beeps, press the SNOOZE/LIGHT key to pause the alarm for 5 minutes. The snooze function can be used repeatedly.
- To stop snooze function, press any other keys when alarm sounds.
- Press the SNOOZE/LIGHT key to illuminate the LCD for 3 seconds.

C/F KEY

- In normal time display, press the C/F key to toggle between Celsius and Fahrenheit temperature readings.

12/24 KEY

- In normal time display, press the 12/24 key to toggle between 12h and 24h display.

WAVE KEY

- In normal time display, press and hold the WAVE key for 3 seconds to activate the MSF scanning function.
- If the clock is scanning for the MSF signal, press the WAVE key for 3 seconds to de-activate the MSF scanning function.

TROUBLE SHOOTING

If your clock displays irrelevant time or does not function properly, which maybe caused by electro-static discharge or other interference, slide open the battery cover, take out the batteries and reinstall them by observing the correct +/- polarity. Your unit will be reset to default settings and you need to set it again.

BATTERY SAFETY & DISPOSAL

- Dispose of batteries and electrical products responsibly at local authority household waste recycling facility.
- DO NOT dispose of batteries in a fire as the batteries may explode or leak.
- Only use "AA" 1.5V batteries in this clock.
- Never use rechargeable batteries.
- Replace all batteries at the same time, NEVER mix new and used batteries, different brands or types.
- Never try to dismantle batteries
- Never short circuit batteries.
- Exhausted batteries must be removed from the clock promptly.
- Remove batteries from the product before extended storage

P.3



- This symbol indicates that this product, and any batteries, should not be disposed of in normal household waste but taken to appropriate local recycling centre, where available. Never throw batteries in a fire or attempt to open outer casing.

P.4