

## New Switch Assignment for MIDI Channels on the DC48 and DC96

In order to simplify MIDI Channel programming between the MIPC-1A Input card and the DC-48 and DC-96 Decoder cards, the MIDI Channel assignment for the DC-48 and 96 have been changed to agree with the MIPC-1A MIDI Channel Switch Assignment.

Switch 1 for Channel 1, Switch for Channel 2, Switch 1 and 2 for Channel 3, Switch 4 for Channel 4 and so on. Channel 16, all the Switches are OFF.

MIPC-1A MIDI CHANNEL SWITCH

Channel	Sw 1	Sw 2	Sw 3	Sw 4
1	X			
2		X		
3	X	X		
4			X	
5	X		X	
6		X	X	
7	X	X	X	
8				X
9	X			X
10		X		X
11	X	X		X
12			X	X
13	X		X	X
14		X	X	X
15	X	X	X	X
16				
	1	2	4	8

DC-48 AND DC96 MIDI CHANNEL SWITCH

Channel	Sw 1	Sw 2	Sw 4	Sw 8
1	X			
2		X		
3	X	X		
4			X	
5	X		X	
6		X	X	
7	X	X	X	
8				X
9	X			X
10		X		X
11	X	X		X
12			X	X
13	X		X	X
14		X	X	X
15	X	X	X	X
16				
	1	2	4	8

