





Train Set in a Tin


Our fabulous Train Set in a Tin is great fun for ages up to 99 years old! Here are a few tips on setting up and operation...

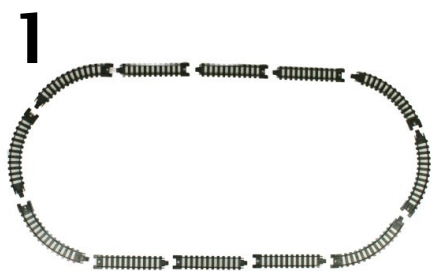

1 Lay out the track as shown here with all joints pointing in the same direction.

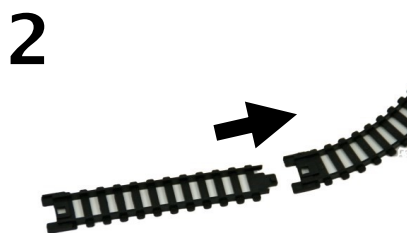


2 To join the tracks lift one end and lower into another until they link to together.

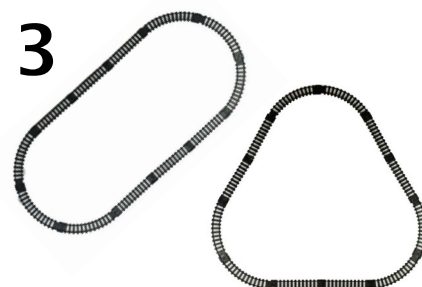


3 The finished track will make an oval but you can also make a curved triangle.




4 Remove the top of the engine. Press the two red tabs on the sides and lift.

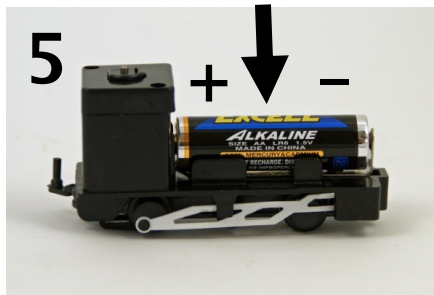

5 Insert an AA battery with the negative terminal at the front of the engine.

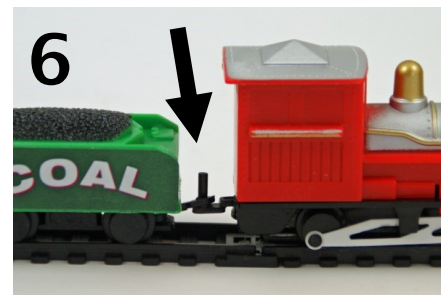


6 Join the engine and carriages together using the hooks and eyes.

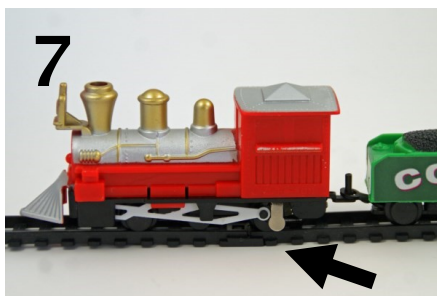

7 Once connected, turn on the engine using the lever shown.



Your train set neatly stores away in the tin!

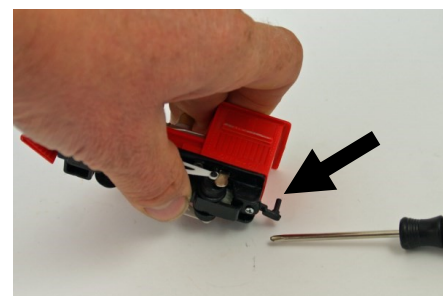

In case a hook or eye breaks we have included spares in the tin. Use a screwdriver to replace them.

AVOID RUNNING ON CARPETS OR ROUGH SURFACES, A FLAT TABLE TOP IS BEST.

Produced by Apples to Pears Ltd., Stroud, U.K.
www.applestopears.com

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Copyright © Apples to Pears Ltd 2011. RECOMMENDED AGE 8+
Exhausted batteries must be removed. If using rechargeable batteries they must be removed before being charged and only charged under adult supervision. Only re-charge rechargeable batteries. Electrical terminals must not be short circuited.



WARNING CHOKING HAZARD Small parts, not suitable for children under 3 years.