

sunTXM[®] Part Numbering.docx

sunTXM/pppp-Snn Solar Radiation Transmitter

where pppp = solar power range in watts

 nn = cable length in metres

Examples:

sunTXM/1500-S1 sunTXM Sensor configured for 0 to 1500 W/m² with 1 metre of cable.

sunTXM/1500-S5 sunTXM Sensor configured for 0 to 1500 W/m² with 5 metres of cable.

sunTXM/1500-S10 sunTXM Sensor configured for 0 to 1500 W/m² with 10 metres of cable.

sunTXM-B sunTXM Base