

330736200	CAP,REEL	PJF	1
373614301	GEAR,RVS CAM	PJF	1
G98620900	LOADING WHEEL	PJF	1
332657301	RING WASHER	PJF	1
490580201	CAM, L POSITION ADJUSTMENT	PJF	1
157192411	SWITCH,LEAF	PJF	1
332752101	LID BATTERY CASE	PJF	1
159084911	CORD,FLAT TYPE	PJF	1
357534800	ROLLER GUIDE HOLDER	PJF	2
G98726396	DRIVE WHEEL	PJF	1
G98620896	CLUTCH WHEEL	PJF	1
G98726420	GEAR WHEEL	PJF	1
G98620895	CAM	PJF	1
489600901	BUTTON REWIND	PJF	2
489497101	BUTTON LEVER	PJF	1
488513100	PLATE, ADJUSTMENT	PJF	1
X49185951	BASE ASSY HEAD	SONY	1

BKE-9510, CCP-110,200,300,310, etc	875960265	IC CX065B	PJF	1
CASSETTE	X49203461	LEVER (S) ASSY IDLER	SONY	3
CASSETTE	332251901	RETAINER THRUST	SONY	1

CASSETTE	3599978	PINCH ROLLER	PJF	1
CASSETTE	360091100	RECORD KEY	PJF	1
CASSETTE	348911711	MOTOR PULLEY	PJF	1
CASSETTE KEYS	493079711	BUTTON (MD-B)	PJF	2
CASSETTE ?		CASSETTE HOLDER	SONY	1
CASSETTE FUCTION KEYS		VARIOUS KEYS	PJF	12
CASSETTE KEYS	4894974101	FUCTION KEYS	SONY	6
CCP-048, CCP-13A, CCP-11, CCP-04, TC-161SD, TC-165	349122400	BELT 115MM	PJF	1
CD		TURNTABLE	PJF	1
CD MECHS		KSS210 S/H BUT OK	DD	1
CD various	491756401	GEAR (P) FLATNESS	PJF	1
CD various	262518802	GEAR (A)	PJF	1
CD VARIOUS	KSS213B	OPTICAL BLOCK	DD	1
CD VARIOUS	157208211	LEAF SWITCH SLED INITIALISE.	DD	1
CDP-17F CDP-S27, FH-404CD, FH-919CD	151862311	LAMP PILOT 10V 120Ma	PJF	1
CDP-3000	350013000	SPRING, TENSION	PJF	1
CDP-7F, CDP-510, CD-209, LBT-V705, CDP-47, XO-V505	491042501	RACK	PJF	1
CDP-970, CDP-K1A	492764901	BELT 40MM	PJF	3
CDP-C50M	871997019	PHOTO INTERUPTER	PJF	1
CDP-M30 +	491754802	TRAY BELT	DD	1
CDP-M30, CDP-C500, BU-5BD	491756701	GEAR (M)	PJF	2

CDP-M30, CDP-M26	491752202	BELT 44MM	PJF	8.2
CF-580, CF-2700D, CF-550B, CF-3800, TC117, TC129A,	348911400	BELT 78MM	PJF	11
CFD-444L, CFD-50L, CFD-501, CFD-64	X33133010	BRACKET ASSY, T PULLEY	PJF	1
CFD-455, CFD-W120S, CFD-W100S, CFD-W460	492897401	BELT	PJF	1
CFD-66L, BVU50	365703599	BELT 70MM	PJF	1
CFS-205L CFS-W304 CFD-W460	X49203471	LEVER (S) ASSY FR	PJF	1
CFS-212L,CFS-2020,CFS-D550.TCM-37	X33209196	ARM ASSY IDLER	PJF	1
CFS-300, CFD-50L	331333500	BELT 58MM	PJF	1
CFS-D550 BM-720	356973800	BELT	DD	1
CFS-DW50L, SL-F3	367917100	BELT COUNTER	SONY	2
CFS-KW300S	X33668001	LID ASSY CASSETTE	DD	1
CFS-KW300S	338943101	HOLDER CASSETTE	DD	1
CFS-W304	X49209221	PULLEY ASSY	DD	1
EV-S700		CASSETTE HOUSING LATCH	DD	1
EVC-3E		STEEL PIN	DD	1
EVS600,KV1440,KV1602,KV16XMTU,	146458311	IF BLOCK	PJF	1
FH-???		HEAD CHANGEOVER COGS	DD	2
FH-10W	359682501	BELT 60MM FLAT	PJF	1
FH-11, FH-77	332551001	BELT W/M	SONY	1
FH-207, FH-204, FH-203, FH-209	491963901	KNOB VOLUME	PJF	1
FH-3, FH-5, FH-7MK	365332400	BELT, FORWARD	PJF	1

FH-3, LDP-1450, LDP3600	330736600	BELT, FAST FORWARD	PJF	1
FH-5, FH-7, SLO-305, SLO-340, SLO-350	365332400	BELT	PJF	1
FH-B 7CD/77CD/66CD/70CD FH-E626CD	X33434471	MOTOR ASSY 4PIN	PJF	2
FTR-100, TC-V30, HVC-4000S	344011300	WASHER, HANDLE	PJF	2
HST-300	356432102	PUSH BUTTON	PJF	1
HST-D205		FUNCTION KEYS	SONY	6
KSS-110	884802201	LASER	PJF	1
KSS-123 S/H	884805601	LASER	PJF	1
KSS-210B	884813711	LASER	PJF	2
KSS-240 S/H FOR TEST PURPOSES ONLY	884814411	LASER	PJF	1
KSS150 etc		LASER MECH BASE PLATE	PJF	1
KSS210		S/H BUT OK	DD	1
KV-1440, KV-1442	143931100	TRANSFORMER ASSY FLYBACK	PJF	1
KV-21, KV-25	157141011	MAINS SWITCH MOD KIT	DD	1
KV-2705	37030511	LID SHAFT HINGE	DD	1
KVM-211XMU	121802551	1K FUSIBLE RESISTOR	DD	0
KVM-211XMU +OTHERS	871997664	RGP02 DIODE	DD	0
LBT-V1000, SEN-290, SEN-301,	3499042XX	BELT	SONY	2
LDP-1450, LDP-3300, LDP-3600	330736600	BELT FAST FWD	PJF	1
MDS-10V	356189200	BELT COUNTER W/M	SONY	3
MDS-J520 MINIDISC	X749492461	SLIDER ASSY	DD	1

MHC-J300	151715011	INDICATOR TUBE	PJF	1
MTL-10B, FH-5, FH-7, TC-FX310	X33091131	FF CAM GEAR ASSY	PJF	1
POWER SWITCH	155496611	PUSH SWITCH AC POWER	PJF	1
SL-3100, BVU-900P	365338700	BELT 26MM	PJF	6.2
SL-F1, BVV-5, BVW-300, BK7502	366959500	WASHER	PJF	2
SLV-E25	6450087837	MODE SWITCH	DD	1
SLV-E410		GEAR PRESS	DD	1
SRF-M30, SRF-M45,	156385711	HEADPHONE JACK	PJF	1
ST-JX430	151861111	LAMP PILOT	SONY	1
TA-F210 TA-F420	157187111	SWITCH ROTARY SLIDE	PJF	1
TC-120		ELECTRET MIC	PJF	1
TC-120, TC-126, TC-207, TC-K1A CF-160, CFS-686	3535427XX	BELT TENSION	SONY	1
TC-129		PINCH ROLLER, REEL/T AND BELTS S/HAND		1
TC-165, TC-266, TC-377, TC-366, TC-4860, TC-6200	3472188XX	BELT TAPE COUNTER 46 THIN	PJF	2
TC-2140, TC-144, TC-138SD	X35424230	BUTTON ASSY PUSH	PJF	1
TC-4600, TC-FX410, TC-K700, TC-K730	357530400	SHAFT GEAR FR		
TC-78, FH-7MK2	151851211	PILOT LAMP	PJF	1
TC-D3, WM-DD, WM-D3, WM-F5, WM-DC2, WM-DD2	X33054190	LEVER ASSY FORWARD	PJF	1
TC-FX		CASSETTE FLAP GEAR	SONY	1
TC-FX CASSETTE	357539200	RING PISTON	SONY	2
TC-FX1010	357546600	HOLDER CASSETTE	SONY	1

TC-FX22	330748300	BELT 68MM FLAT	PJF	1
TC-FX22, FH-3	330748300	BELT(R) CAPSTAN	PJF	1
TC-FX33,TCM130V	330739000	BUSHING LOADING SPRING	PJF	2
TC-FX410R, FH-150R/2	331960801	RETAINER THRUST	PJF	2
TC-K1A	356110200	WINDOW CASSETTE	PJF	1
TC-K1A, CFS-65S, CFS-V8, CFS-666, CFS-566, HMK-33,	355875100	BELT CAPSTAN 77MM FLAT	PJF	1
TC-K1A, HMK-33, HMK-11, HMK-120	355871900	BUTTON,FF	PJF	1
TC-K1A, TC-K15, TC-U2, HMK-44, HMK-120, EX-10	355872400	BELT CAPSTAN 74MM FLAT	PJF	2
TC-K22	X35735091	HOLDER CASSETE	PJF	1
TC-K22 TC-K33 TC-K44	X35735091	HOLDER CASSETTE	PJF	1
TC-K33, TC-K44, TC-K22	357356300	COLLAR	PJF	1
TC-K333, TC-K555, TC-K700, TC-K501, TC-V910	151831300	PILOT LAMP	PJF	2
TC-U40, TC-K35, TC-K45, TC-K51, TC-U30, TC-15F	356553601	BUTTON CONTROL	PJF	1
TC-V7	X33073571	GEARS	SONY	1
TC-W3, XO-550WP, HST-750W, XO-700	154326011	HEAD	PJF	1
TCK444 TCK555	356402711	LIMITER BELT CLUTCH PAD	DD	1
TCK444 TCK555	357530400	SHAFT GEAR FR	DD	1
TV SEVERAL MODELS	141251911	INDUCTOR 3.3uH		
TV various	155277400	4PIN PUSH SWITCHES	SONY	10
TV-413, FX-412, FX-406,	155225200	SLIDE SWITCH ROTARY	PJF	1
WALKMAN	156680061	LINE OUT JACK	SONY	1

WM ?	150791700	HEADPHONE JACK	PJF	2
WM-??		VOLUME KNOB	DD	1
WM-BF57	X33467341	HOLDER ASSY CASSETTE	PJF	1
WM-D3, TCD-3		FERRITE COG, PLASTIC COG	PJF	1
WM-D6, WM-R2, TCS-310	150768831	HEADPHONE JACK	PJF	1
WM-D6C	150792911	EARPHONE SOCKET	DD	1
WM-D6C	348013600	CAPSTAN DRIVE BELTS	DD	9
WMF-63	156329811	HEADPHONE JACK	PJF	2
WMF-X36, WM-A10, WM-AF22	156528711	HEADPHONE JACK	PJF	1
X0-750W	491494301	BUTTON PLAY	PJF	1
X0-D10S	492991601	BUTTON PLAY	PJF	2
XO-D1	489605001	BASE (B) CASSETTE LEVER	PJF	11
XO-D10S, XO-D8CD	492318101	BUTTON (T1)	PJF	6
XO-D10S, XO-D8CD	492318141	BUTTON (T1)	PJF	1
	332252401		PJF	2