

2N3055	1
2N3055H	1
2N3096	1
2N4212	1
2SA1015	6
2SA1016	3
2SA1027	7
2SA1029	1
2SA1065	1 NEC
2SA114	7
2SA1145	4
2SA1175	2
2SA12	1 HITACHI
2SA1249	2
2SA1249	1
2SA1301	2 TOSHIBA
2SA1301	1 TOSHIBA
2SA1306	1
2SA1321	3
2SA1358	7
2SA1360	4
2SA1369	8
2SA1376	1
2SA1382	1
2SA1489	1
2SA1490	1
2SA608	7
2SA628	1
2SA951	1
2SA958	6
2SA968	8
2SA970	2
2SA999	2
2SB1016	3
2SB1068	1
2SB1068K	2
2SB539B	3 NEC
2SB561	20
2SB641	1
2SB646	1
2SB649A	2
2SB733	3
2SB733	1
2SB740	6
2SB755	1 TOSHIBA
2SB837	2
2SB856	8 SONY
2SC1096	1
2SC1128	2 SONY
2SC1128	1 SONY
2SC1128	1
2SC1129	13
2SC1316	1
2SC1318	2
2SC1475	2
2SC1509	1

2SC1579	1 SANKEN
2SC1583	2
2SC1624	1
2SC1685	1
2SC1740	9
2SC1760	3 SONY
2SC1761	2 SONY
2SC1810	1 SONY
2SC1815	13
2SC1826	2
2SC1962	1
2SC1962	6 SONY
2SC1986	1
2SC2001	3
2SC2001	2
2SC2009	4
2SC2141	1 SONY
2SC2240	1
2SC2278	2
2SC2315	1
2SC2315	2
2SC2335	5 NEC
2SC2362	12
2SC2440	1
2SC2440	4
2SC2551	1 SONY
2SC2625	1
2SC2656	1
2SC2705	5
2SC2785	2
2SC3158	2 NEC
2SC3180N	1 TOSHIBA
2SC3195	4
2SC3261	1
2SC3280	4 TOSHIBA
2SC3355	2
2SC3421	5
2SC3423	2
2SC3423	3
2SC372	2
2SC383	1
2SC3853	1
2SC3854	1
2SC403C	28
2SC403SP	10
2SC4927	1
2SC536	2
2SC629	1
2SC644	4
2SC710	6
2SC732	6
2SC763	2
2SC805	1
2SD1046	1
2SD1061	1
2SD1110	1

2SD1276A	1
2SD1425	1
2SD1439	2
2SD1441	2
2SD1453	1
2SD1459	1
2SD1554	1
2SD1555	1
2SD1857	2
2SD1858	4
2SD1887	1
2SD261	1
2SD287	2 NEC
2SD287B	2
2SD315	3
2SD330	1
2SD381	1
2SD389	2
2SD424	1
2SD468B	3
2SD669A	1
2SD745	1
2SD774	1
2SD880	2
2SD894	1
2SD896	2
2SD898B	1
2SD998	1 NEC
BC109	4
BC142	3
BC143	3
BC158	1
BC182L	3
BC213	1
BC308B	1
BC337A	25
BC338-40	1
BC546B	1
BC547B	1
BC549B	4
BC556B	6
BC559	2
BC559B	5
BC560	1
BC639	13
BC639	1
BD137	1
BD139	3
BD243	2
BD243	2
BD243C	2
BD246C	1
BD648	1
BD648	1
BD678	1
BD826	1

BD901	1
BD902	1
BD909	8
BD909	
BDT64C	2
BDW83C	1
BF423	3
BF871	1
BU1508DX	1
BU208A	3 ST
BU208A	1 TOSHIBA
BU2508AF	1
BU2525AF	1
BU500T	1
BU508AF	1
BU508V	1
BU705	1
BUK555	2
BUT11A	1
BUT11AF	4
BUT12AF	6
BUV48A	1
BUW41B	2
BUW84	2
CBF423	5
F15N	1
F15P	1
F9530N	1
FXT749	2
GL7824	3
GL7915	12
K192	2
K34	2
LM90	7
MJ2955	2
MPS9630K	8
MPSA06	3
MPSA42	4
MPSA92	4
S2000N	2
S813	1
SG264A	1 SONY
SG629	4 SONY
SG6533	2 SONY
T9034V	1 RCA
T9064V	1
TDA1412	1
TIP112	2
TIP121	12
TIP137	1
TIP31A	12
TIP35C	2
TIP36C	1
TX183S	1 SONY
ZTX53	1
ZTX63	1

403	3
1402	6
40822	2 RCA