



Free Standing Blind Installation Instructions – Part 1





Free Standing Blind Installation Instructions – Part 1



Lay door panel front section face down



Fit first side panel to top of main support leg ensuring the side wall is fitted tight to the support block of the main frame



Free Standing Blind Installation Instructions – Part 1



Fix first side panel to front panel using 100mm screws provided- top middle and bottom, these fixings are temporary fixings. (3 x 100mm screws needed)






Free Standing Blind Installation Instructions – Part 1



Fix second side panel as per previous side panel- fix using 3 x 100mm screws . These fixings are temporary.

3 x 100mm screws needed

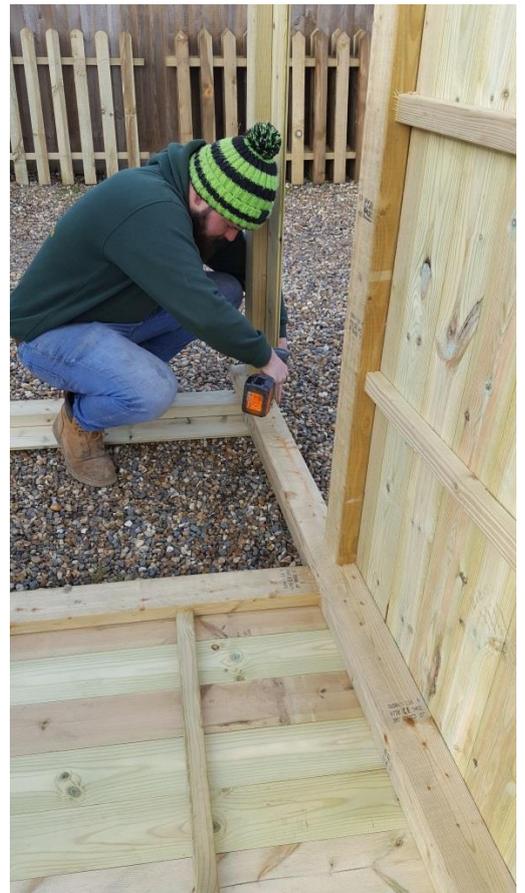




Free Standing Blind Installation Instructions – Part 1



Carefully lift back panel section onto side panels and fix as before using 3 x 100mm screws to side walls.

6 x 100mm screws needed

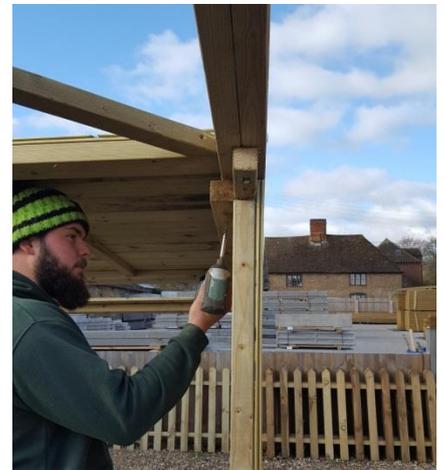



Free Standing Blind Installation Instructions – Part 1



Temporarily fix one of the approx. 3.0m 38x63mm diagonal support braces between the bottom rails of the front and back frames for support whilst lifting the blind to upright using 1 x 100mm screw at each end

2 x 100mm screws needed



Lift the blind and temporarily fit the 4x4 diagonal brace support block under the blind to aid lifting the blind to upright

Gives space for hands / fingers



Free Standing Blind Installation Instructions – Part 1



PREPARE GROUND TO ENSURE LEVEL AND FLAT WHERE THE SUPPORT LEGS WILL GO.

Carefully and slowly lift the blind upright

CHECK BLIND IS LEVEL & UPRIGHT



Free Standing Blind Installation Instructions – Part 1



Fit ladder to front panel doorway. Fix ladder to top and bottom rails using 4 X M10 x 110mm coach bolts , washers and nuts. Pre-drill holes using 10mm drill bit. 4 x 110mm coach bolts, washers and nuts needed.





Free Standing Blind Installation Instructions – Part 1



Fit the floor bearer joist hangers to the bottom rail of the side panels using 30mm screws provided. **Must be on the short side panels**

1. Fit left hand hanger 5½ inches from the end to centre of hanger

Ensure the bottom of the joist hangers sit flush with the bottom of the timber



2. Fit centre hanger in the middle.



3. Fit right hand hanger 5½ inches from the end to centre of hanger

Copy above for both sides

48 x 30mm screws needed.

