

PowerTech

Engine & Equipment
Model

6081

Low Comp. Piston

4802 4806

8.1L


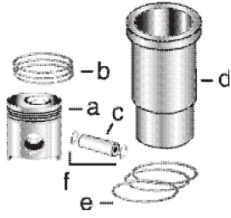



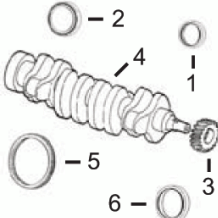
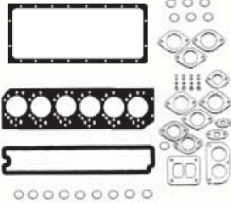
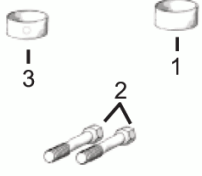
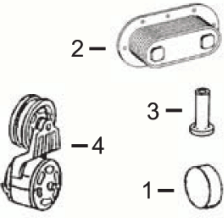
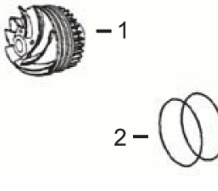



Bore: 4.56 in
116 mm
Pin Ø: 1.85 in
47 mm

Con Rod (m):

R116340 (ESN > 86,536)
R501034 (ESN 86,537 >)

APPLICATIONS:

See Index

				
<p>1) Engine O/H Kit</p>	<p>Piston-Liner Kit</p>	<p>Main Bearing</p>	<p>Thrust Bearing</p>	<p>Con Rod Bearing</p>
<p>2) Engine I/F Kit</p>	<p>TRE508156 Consists of:</p>	<p>TRE504195 Std. TRE504196 .011</p>	<p>TRE504198 Std. TRE504199 .011</p>	<p>TR116081 Std. TRE57167 .011</p>
<p>1) TOK504202</p>	<p>a) TRE70689</p>	<p>Use 6</p>	<p>Use 1</p>	<p>Use 6</p>
<p>2) TIK504202</p>	<p>b) TRE503528</p>		<p>Thrust Washer TRE61253 Std.</p>	
<p>Con Rod (m): R116340 (ESN > 86,536) R501034 (ESN 86,537 >)</p>	<p>c) TR57771 d) TR116236 e) TAR98850 f) TE1343FN</p>	<p>Use 3, Order Qty 1</p>		
				
<p>1) Front Seal 2) Rear Seal</p>	<p>1) O/H Gasket Set</p>	<p>1) Bush, Con Rod 2) Bolt, Con Rod 3) Bushing, Cam</p>	<p>1) Plug Camshaft 2) Oil Cooler 3) Tappet 4) Tensioner, Belt</p>	<p>1) Pump, Water 2) O'ring Mount Kit</p>
<p>3) Crankshaft Gear 4) Crankshaft 5) Ring Gear 6) Rear Gear</p>	<p>2) Head Gasket Set 3) Head Gasket 4) Oil Pan Gasket</p>			
<p>1) TAR49025 2) TRE520036 3) TR104587 4) TRE535300 (1) or TRE534314 (2) 5) TR28811 6) TR63326</p>	<p>1) TRE506220 2) TRE506222 3) TRE55475 4) TR71918 (3)</p>	<p>1) TR74008 x6 2) TR66452 x12 (4) 3) TR87561 x4</p>	<p>1) TR82007 2) TAR55394 3) TR110126 4) TRE518097 (9) TRE68715 (9) TRE57498 (9)</p>	<p>1) TRE521502 2) TRE509463</p>
	<p>Valve, Intake</p>	<p>Valve, Exhaust</p>	<p>Insert, Valve 1) Intake 2) Exhaust</p>	<p>1) Cap, Valve 2) Lock, Valve 3) Shield, Valve</p>
<p>TR84618 Std. TR93308 .003 TR93312 .015</p>	<p>Valve, Intake</p>	<p>Valve, Exhaust</p>	<p>1) TR121193 2) TR119132</p>	<p>1) Spring, Valve</p>
<p>TR84618 Std. TR93308 .003 TR93312 .015</p>	<p>TR84619 Std. TR93311 .003 TR93313 .015</p>	<p>1) TR121193 2) TR119132</p>	<p>1) TT20129 2) TT20077 3) TR102882 x6 (5) TR501640 x6 (6)</p>	<p>1) TR91822 (7) TR502187 (8)</p>
		<p>(1) With helical oil pump drive gear. Do not use with HPCR fuel system. (2) With straight oil pump drive gear. (3) With Aluminum Oil Pan use TR49377 (RE504822). (4) Use TR66452 Rod Bolts with Machine Split Connecting Rods, and use TR501035 Rod Bolts with Fractured Split Connecting Rods. (5) For engine ESN 199,999 and below. For Exhaust Valves only. (6) For engine ESN 200,000 and above. For Exhaust Valves only. (7) For engine ESN 199,999 and below. (8) For engine ESN 200,000 and above. (9) Check application for proper usage.</p>		
<p>Thermostat</p>	<p>Pump, Oil</p>			
<p>TAR48675 180° F</p>	<p>TRE60622</p>			